


MW2 + JOLLYFILL EXPLAINED

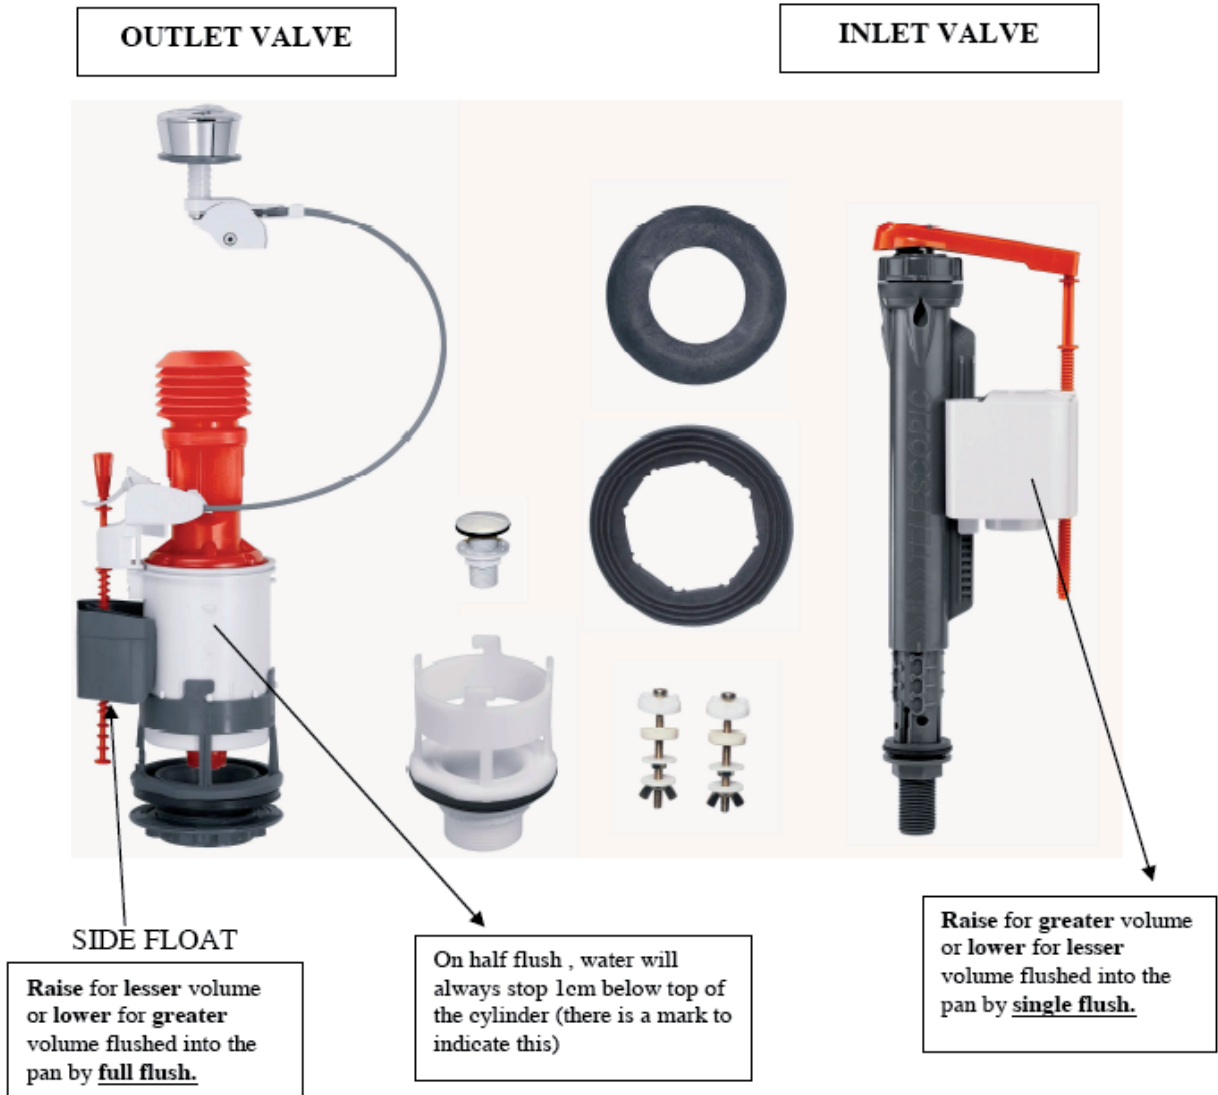

VOLUME OF WATER TO BE EVACUATED : PRINCIPLE

- The adjustment of volume in HALF FLUSH is done by the adjustment of the INLET VALVE.
- The adjustment of volume in FULL FLUSH is done by the adjustment height of the SIDE FLOAT